

Receive Camera System

Tracking Number

The tracking information of the Eye Trax camera system was emailed to the point of contact who initially purchased the system. The point of contact also received the “Client Login” information in the same email.

Open Camera System Box


Open the camera system box and inspect the components for any damage that may have occurred during shipping. If any damage has occurred take pictures of the damage and contact Technical Support (800) 594-4157 extension #2.

Test Camera Prior To Installation

Test the camera for functionality prior to installing it.


Install The Antennas

Locate the antennas and screw them on to the gold SMA terminals on the back of the housing.

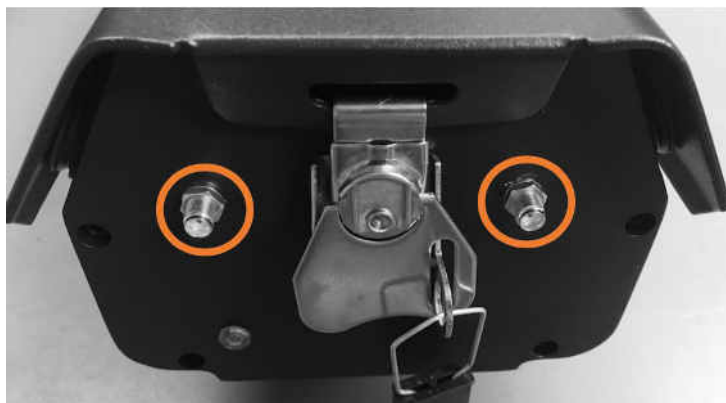

Power The Camera “ON”

Power the camera “ON” by depressing the rocker switch located on the back of the motion sensor housing. Straight line depressed down = power “ON”.

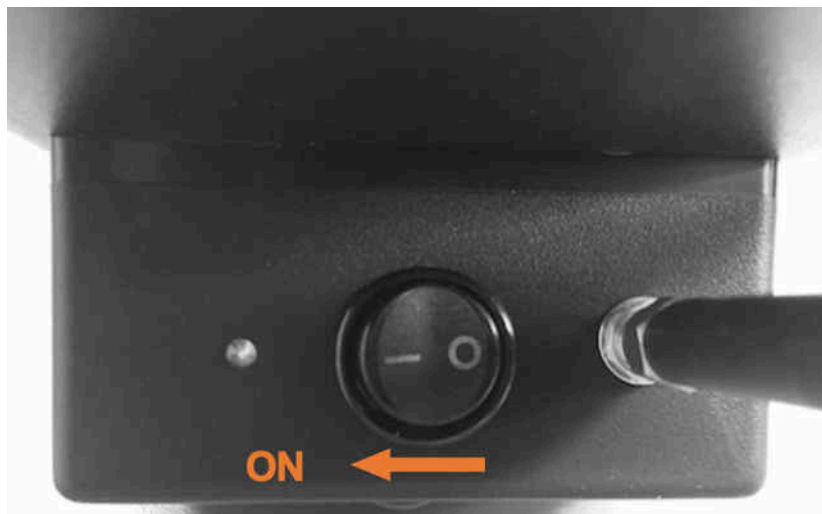

Verify Camera Connectivity

Approximately 30~40 seconds after powering the camera “ON” a green light will appear in the window on the rear of the camera housing. This green light indicates the camera’s modem is powered “ON” and connected to the cloud software.

Note: If the camera does not find a signal, the green light will turn off for 30 seconds and then back on in attempt to connect to the cellular network. Once connected, the green light will remain solid.



Cloud Software & Mobile Application

On any device locate: <https://www.eyetrax.net/>

Enter the username & password that was emailed to the point of contact when the camera system was purchased.


PC Login



Mobile Application

App Icon:


Once logged in, open browser or mobile device’s browser settings and locate “Save To Home Screen” so that an Icon is displayed for the next time you open the mobile application.

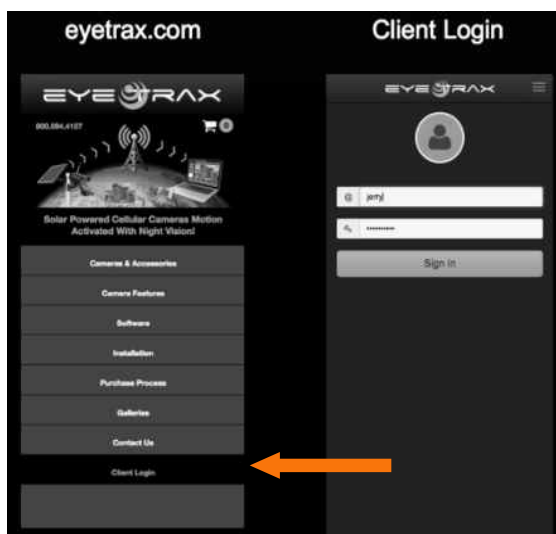

Send Camera Settings

Set the “settings” of the camera system to your desired acquisition methods.

PC View

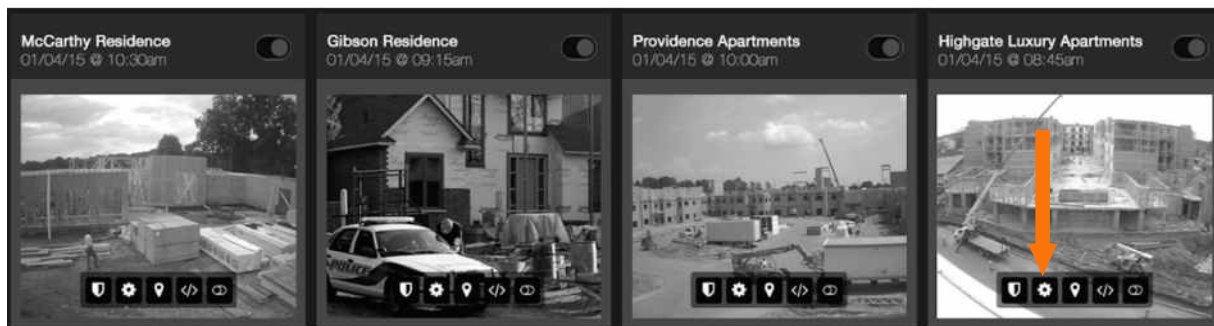

Mobile Application

Choose Camera



Modify Settings



Cloud Software & Mobile Application

For more detailed instructions on the cloud software locate: www.eyetrax.net/support/installation

Camera Installation


Determine The Target

The target or center point of camera's focus point is the starting point for determining the camera's installation location. If using the motion sensor for security camera purposes note that it has an effective distance of 40ft (12m) in front of viewing area. Wireless remote motion sensor(s) can be placed with 250ft (76m) of the camera for extended detection.

License Plate Capture Installation

In order to capture license plates, the camera requires a "telescopic lens" with a viewing angle of 22°. Cameras not pre-ordered with the "telescopic lens", will have to be retrofitted at the Eye Trax facility.

Note: A vehicle traveling faster than 50mph may not trigger the motion sensor to capture video.

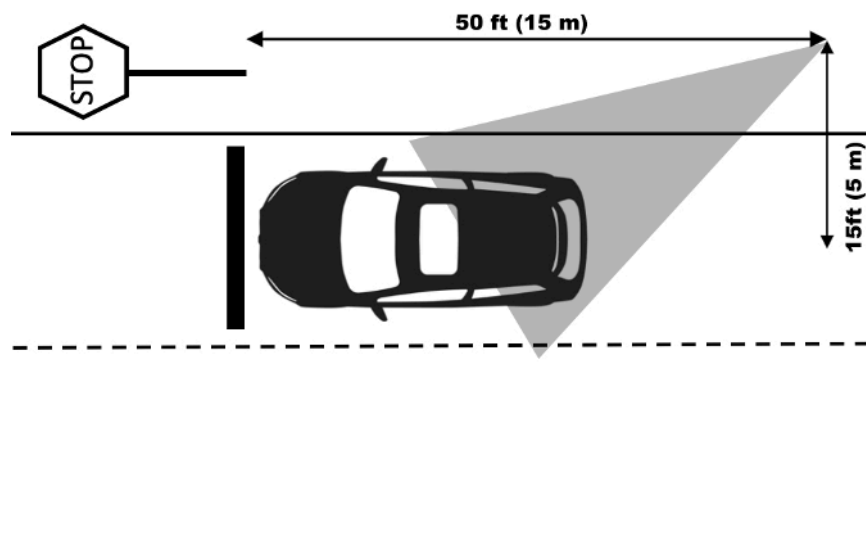

Determine Mounting Options


Once the mounting location has been determined for the camera, look for a suitable mounting surface including existing poles, trees, and building exteriors. If there is not a suitable location to mount the camera, Eye Trax offers permanent and temporary mounting pole options in the “accessories” section of our products page.

Install Camera Mounting Bracket

Install the camera-mounting bracket to your designated surface or pole. Verify that the top section of the Bracket body is level to the ground for best picture results.


Install Camera To The Mounting Bracket

Join camera to mounting bracket by installing the (2) M6 cap screws located in the bottom of the camera housing.

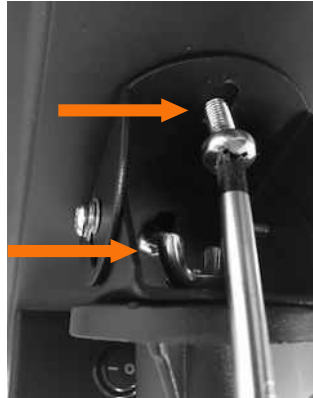

Aim The Camera

Verify that the camera is aimed correctly at desired target by requesting “live” images until desired view and adjustments have been accomplished. Make adjustments to the pan & tilt screws using a Phillips head screwdriver.

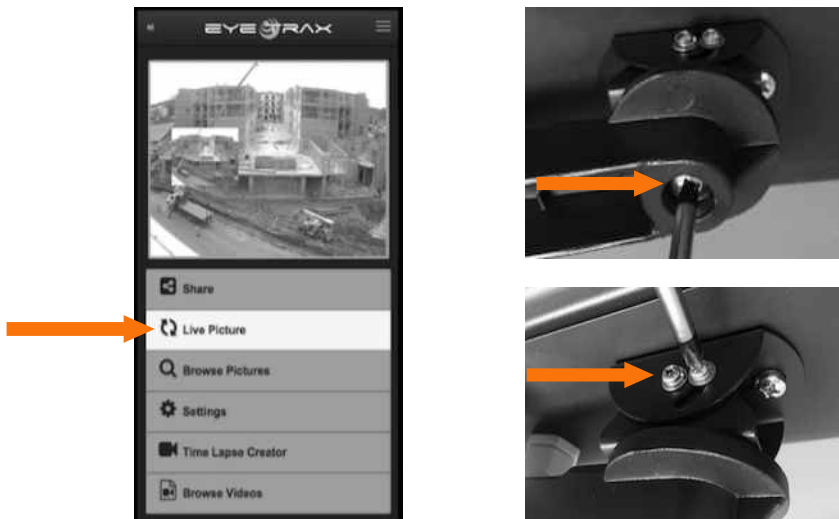


Install Solar Panel Mounting Bracket

Install the solar panel mounting bracket to your designated surface or pole.

Note: The solar panel requires at least 6 hours of direct, unobstructed sun exposure to keep system operating. If needed, the solar panel can be installed 100 ft. away from the camera for proper sun exposure. Eye Trax offers extension wires in 100 ft. lengths.

Install The Solar Panel To The Mounting Bracket

Join solar panel to mounting bracket by installing the (2) M6 cap screws located in the solar panel bracket.

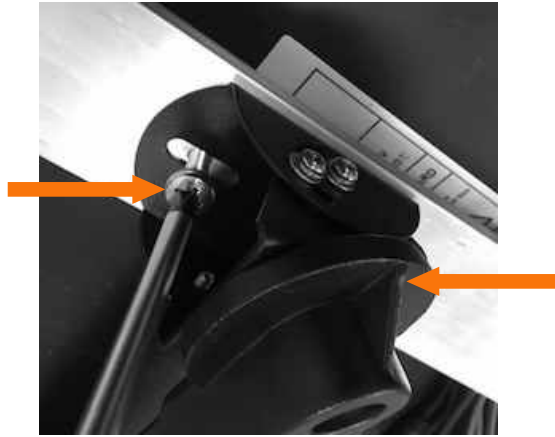

Aim The Solar Panel


The solar panel requires six (6) hours of non-obstructed direct sunlight (no shadows), mounted on a **45-degree** angle-pointing due **SOUTH**. Tighten the pan & tilt adjustment screws on the bracket once the solar panel is pointing in the correct direction and angle.

In the case the desired camera location does not provide enough direct sunlight required by the system, the solar panel can be installed up to 100ft (30m) away. Extension cables are available from Eye Trax web site.

Utilize the "Installation Triangle" provided with your camera system to determine due SOUTH and solar panel installation angle of 45 degrees.


Find Due South

Determine due SOUTH by placing the Installation Triangle on the solar panel mounting pole. Rotate the triangle around the mounting pole until the "S" on the compass is in line with the arrow. Install the solar panel so that the face of the glass is pointing due SOUTH.

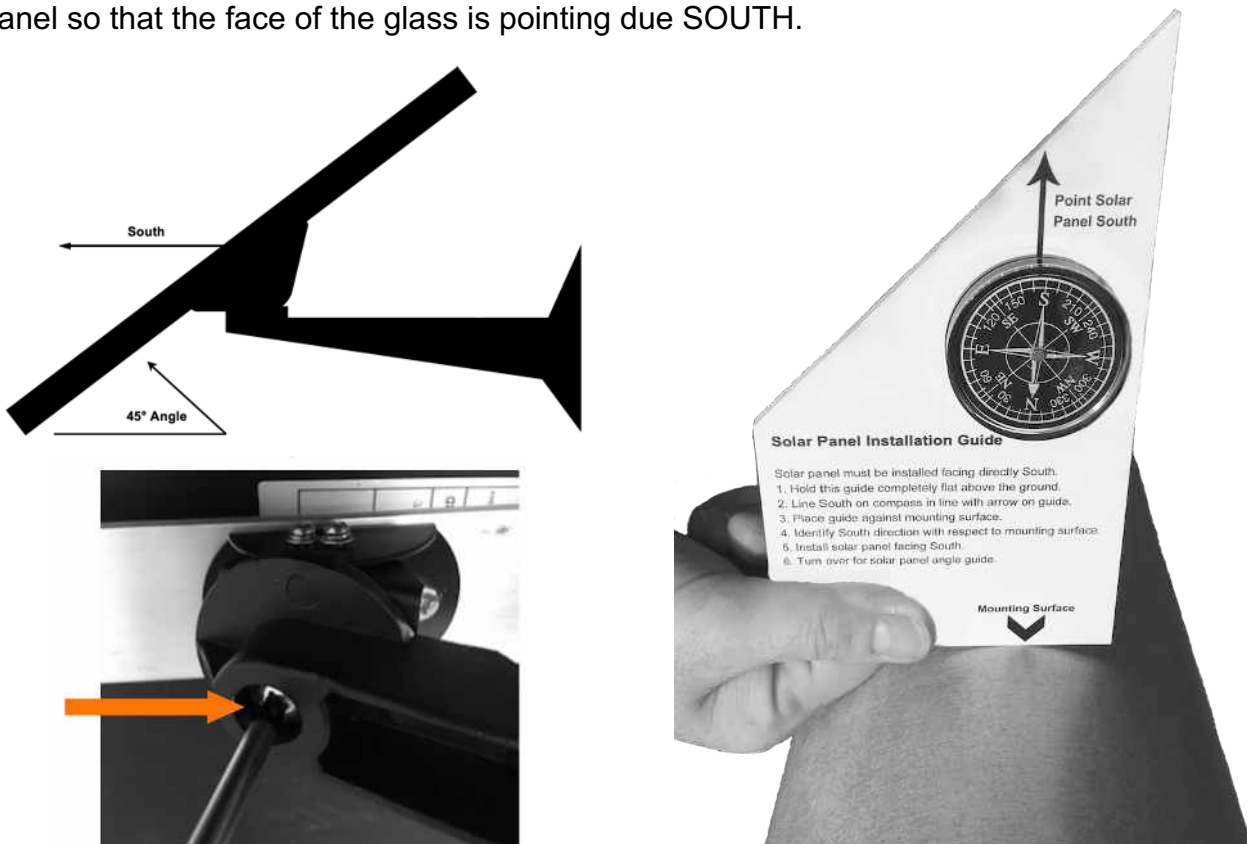


Angle Panel To 45-Degrees

Place the Installation Triangle on top of the mounting bracket and angle the solar panel so that the aluminum bar sits flat against the guide. Tighten all four (4) set screws on either side of the mounting bracket.

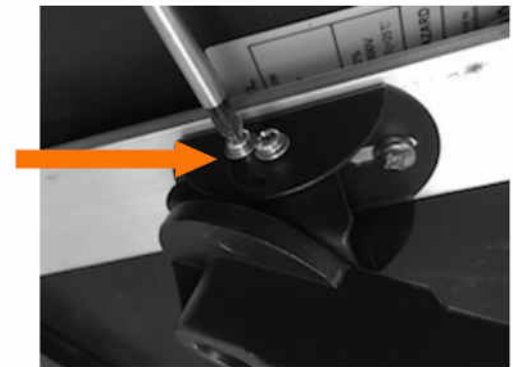

Connect Power Wire


Join the solar panel power wire to the camera by inserting the DC plugs together and fastening watertight cap. Twist tight to ensure weatherproof seal of the terminal.

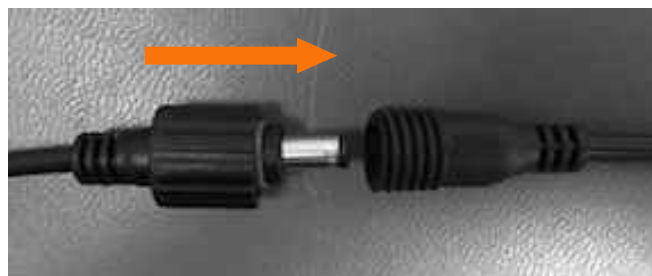

Motion Detection & Night Vision Distances

If utilizing the motion detector of the camera for security purposes, verify that the camera is mounted in a location that will work accurately. The motion detection coverage area is 40ft (12m) in front of the camera and 60ft (18m) wide. The recommended mounting height to maximize the effective area of the motion sensor is 12ft ~ 15ft (3.5m ~ 4.5m). The camera system also emits a wireless network for remote sensors including the remote motion sensor. The remote motion sensor can be placed within 250ft (76m) of the camera for extended detection coverage and camera pre-triggering.

Note: The motion sensor measures changes in the ambient thermal atmosphere, any changes in the ambient thermal detection area that is a percentage lower or higher than the current, results in the camera to acquire a video clip. The sensitivity can be increased or decreased by turning the orange set screw (with flat head screw driver) located on the bottom of the sensor. Note that the numbers on the orange setscrew point to the direction of sensitivity setting.

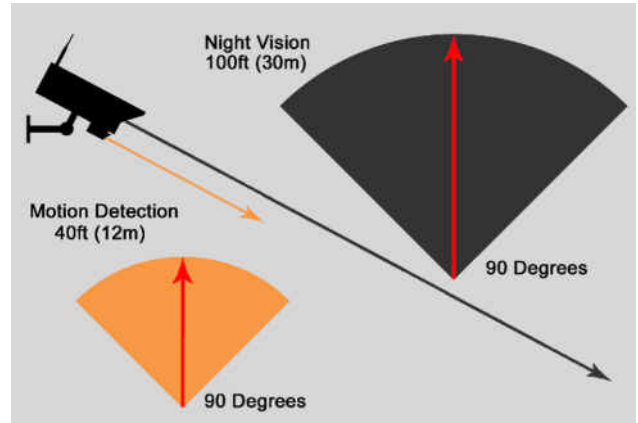


Motion Detection Sensitivity

Adjust the sensitivity of the motion sensor by removing the rubber plug and using a small flat head screwdriver to adjust accordingly. Adjust the motion sensor sensitivity is vital for each camera deploy location and may require additional adjustments after the first installment. Too many motion activated video acquisitions may reduce the camera’s battery to unsafe levels and cause the camera to temporarily shut down until the solar panel charges the battery back to operation levels.



Wireless Device Network

Remote Motion Sensors can be placed within 250ft (76m) of the camera for the purposes of increasing the detection area and pre-triggering the camera for increased image acquisition.

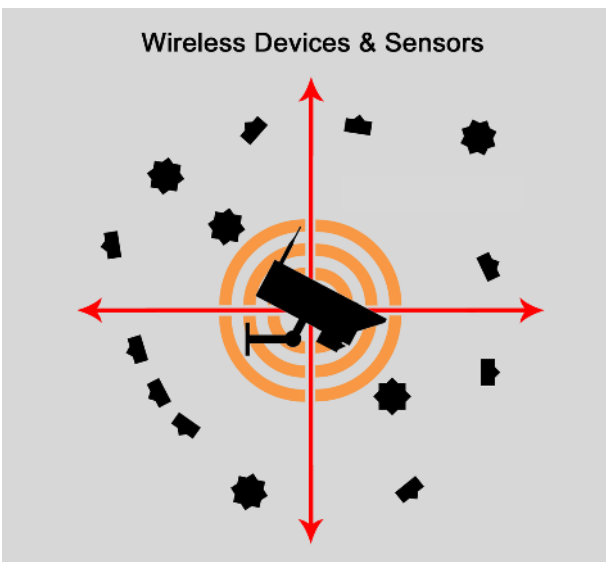


4-Way Sensor




1-Way Sensor

Adding & Deleting Users

Choose Admin drop down and select User Management.

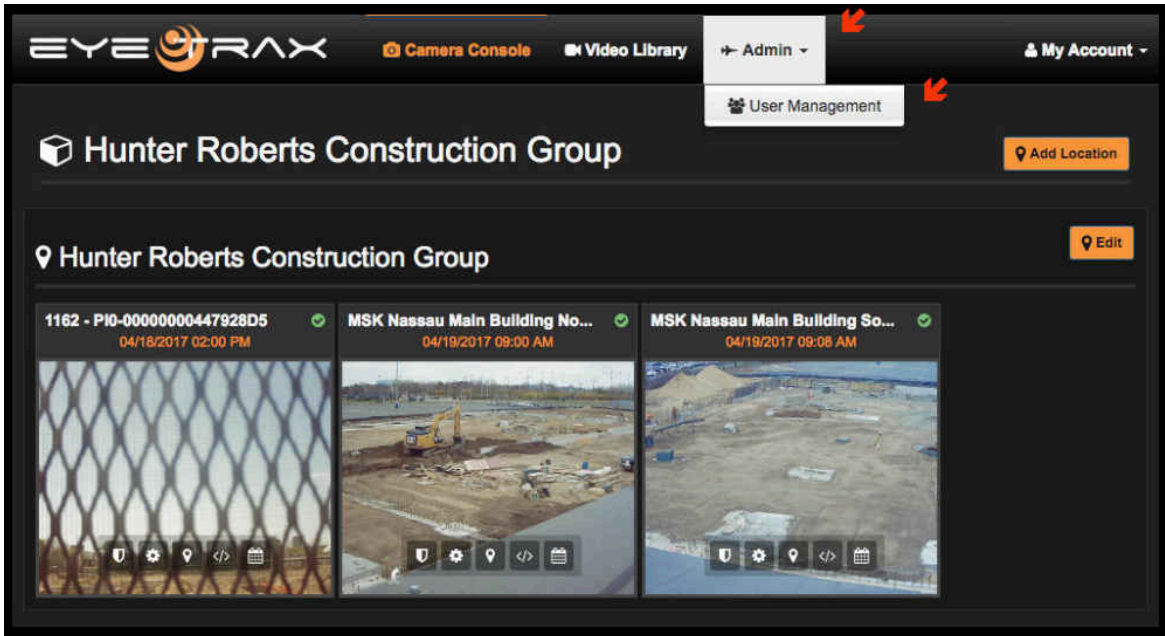

Click on green + symbol and enter all the User's information. Once complete click Save Changes and then click on Camera Console to return back to the camera page.

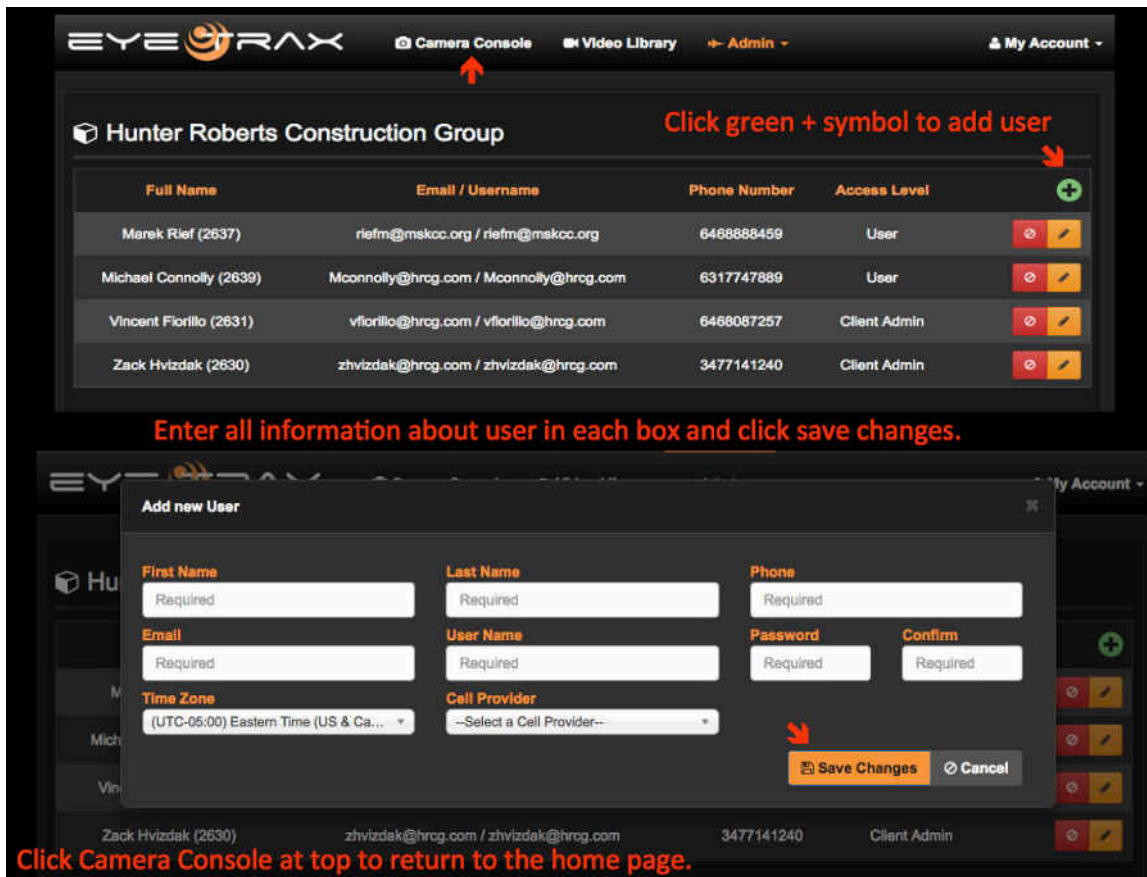


User Camera Viewing & Software Permissions

Now that a User has been added, the software allows the Administrator to select which cameras the User can view and software controls. While in the Camera Console select the shield icon and select the User(s) to view the particular camera. Provide the level of access for the User(s):

No Access – User will not see camera upon signing into the software.

Viewer – User can only view images & video but cannot make any changes to settings and User accounts.

Administrator – User can change all settings, add/delete User, modify service, and change camera permissions.

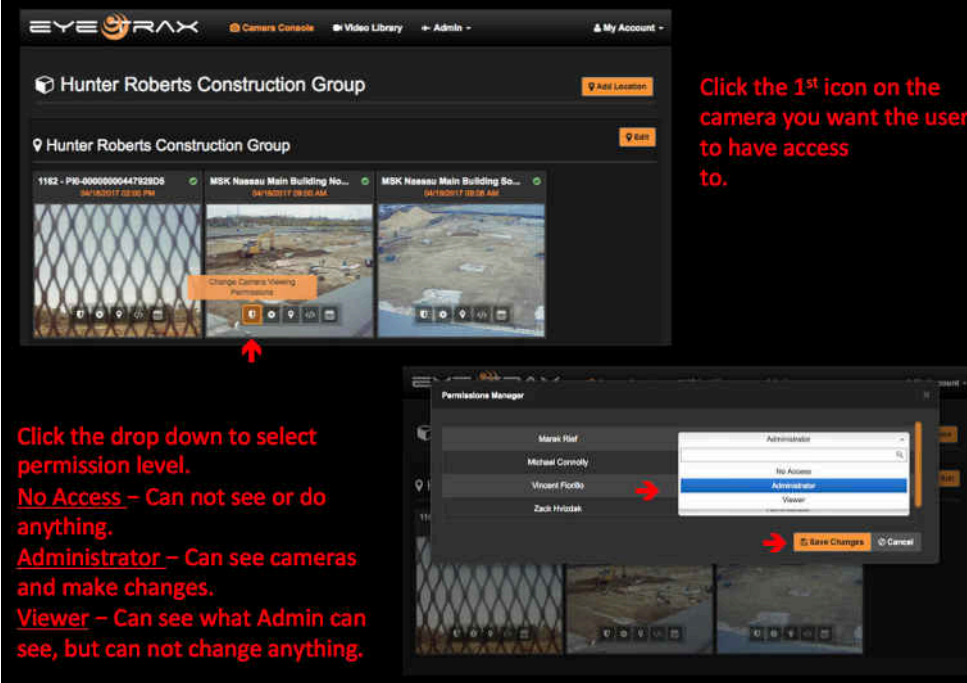


Click the 1st icon on the camera you want the user to have access to.

Click the drop down to select permission level.
No Access – Can not see or do anything.
Administrator – Can see cameras and make changes.
Viewer – Can see what Admin can see, but can not change anything.

Settings & Alerts

Choose the gear symbol to modify the camera acquisition settings and alert notifications.

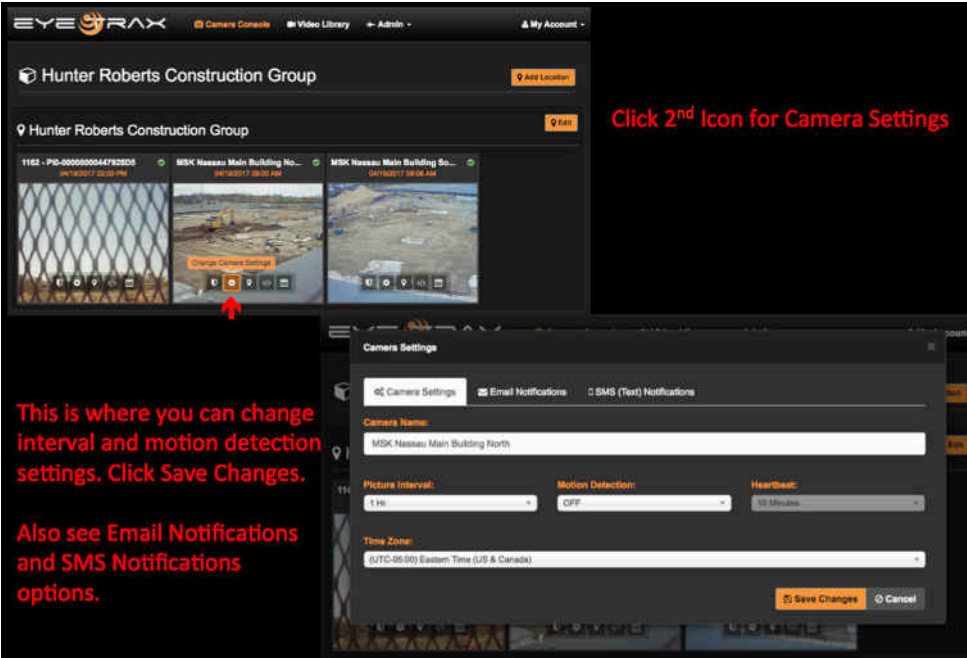


Click 2nd Icon for Camera Settings

This is where you can change interval and motion detection settings. Click Save Changes.

Also see Email Notifications and SMS Notifications options.


Change Camera Location

Choose the pin icon to place the camera in a different location on the Camera Console for camera organization.

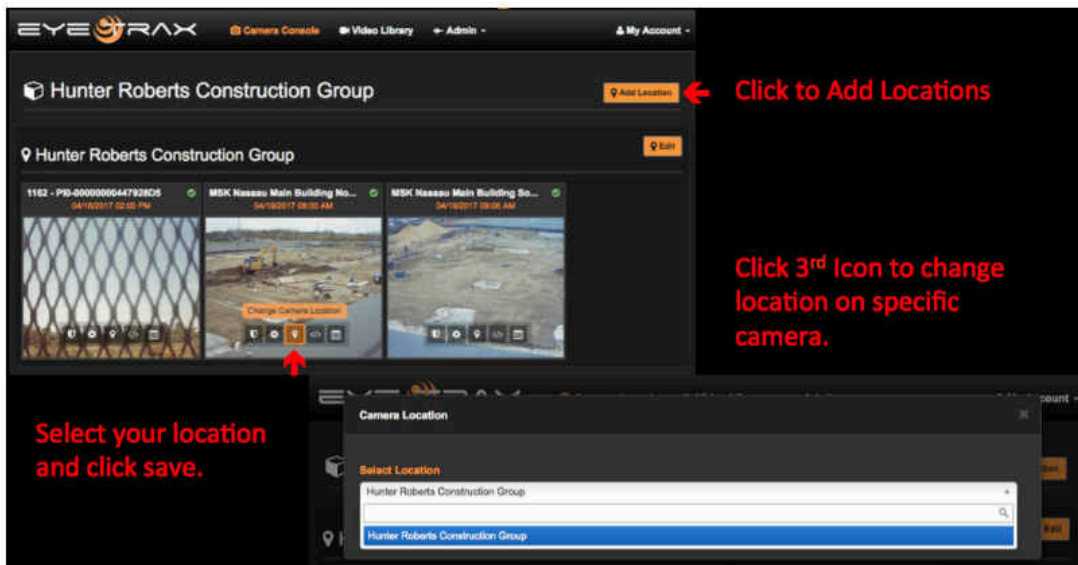

Website Automation

By selecting the double arrow icon the software provides HTML code that is inserted into any website. The snippet code allows images & video to autonomously update as media is acquired for marketing purposes. Select the correct viewing window size, copy the code and paste into any website's HTML.

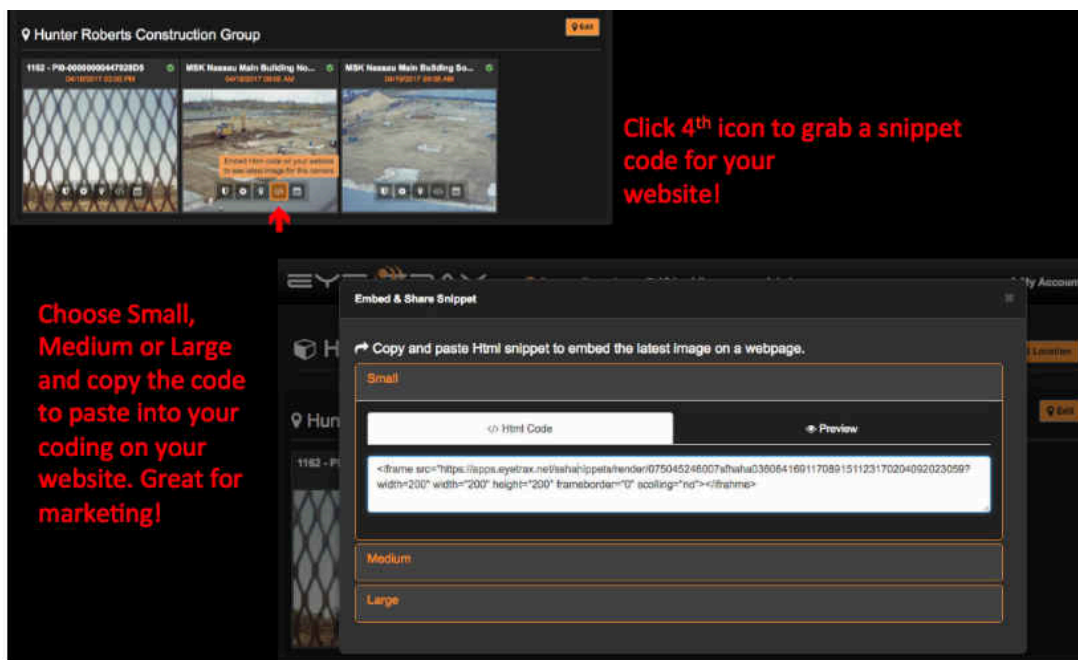

Technical Support

For technical support, please call (800) 594-4157 or find our helpful tutorial videos located on the Eye Trax [website](#).